


AUTOWELD!

Id WELDER

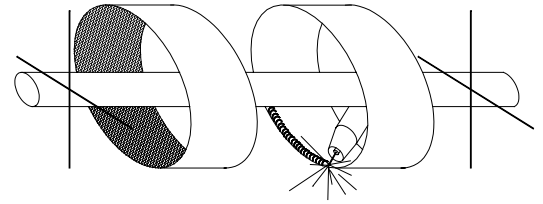

Weld worn or damaged bores for Re-machining

Mining equipment – Road plant – Agricultural – Machine shops – Fixed plant – Logging - Quarry

Welds a continuous concentric bead ————— **Then steps over (*with adjustable step*)**

Use it in the workshop or on site

Mount it to the workbench or workpiece

Mig or flux core

Weld in-situ / On site

Exotic alloys

Multiple layers

Vertical or Horizontal

Range 38 – 400mm diameters



Pendent control / Rapid traverse / Rapid position / Bi-direction / Reversible feed / 12-volt power



Contact